

ASSEMBLY INSTRUCTION

3041-CP1411-TV-1084

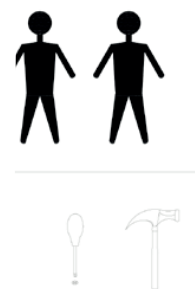


FIG.
1

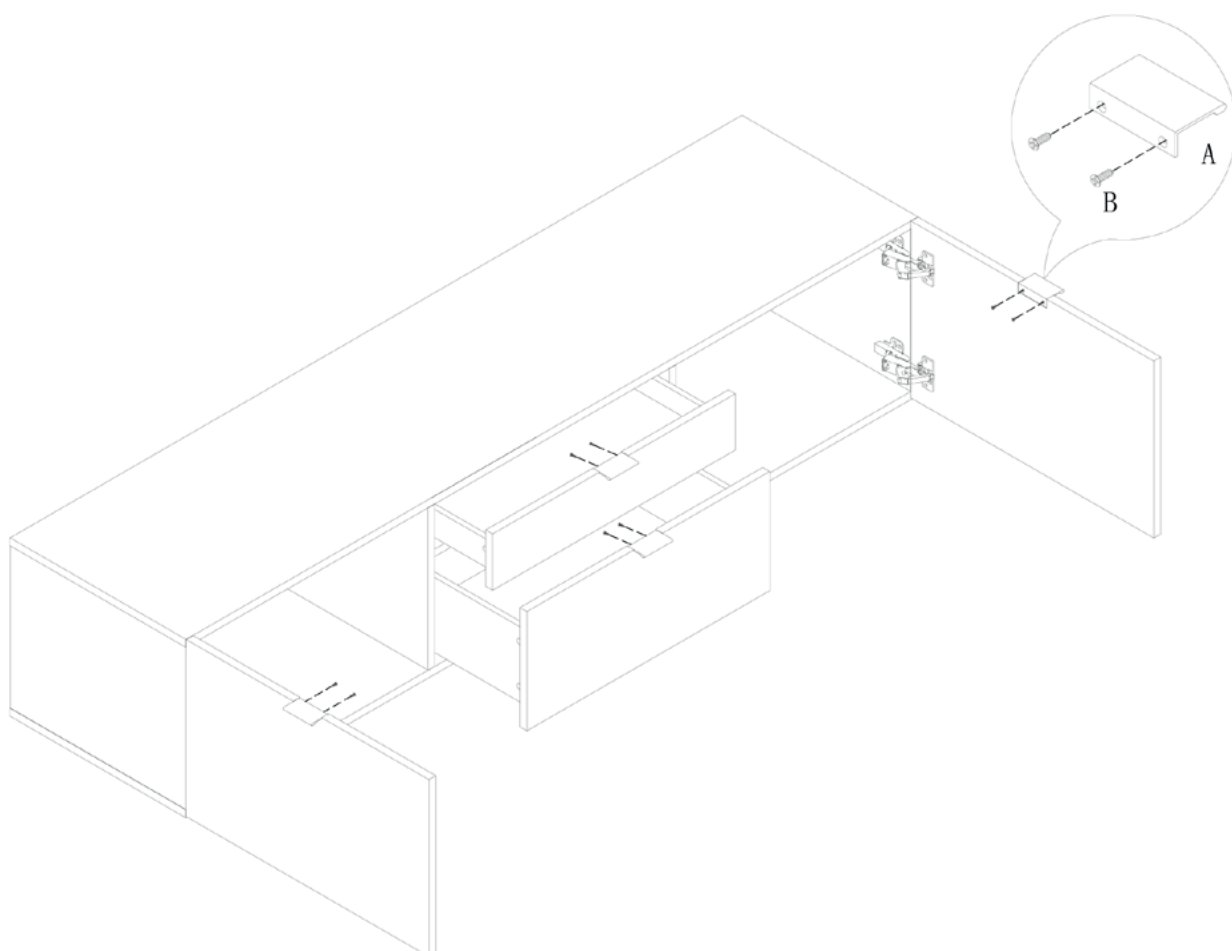


FIG.
2

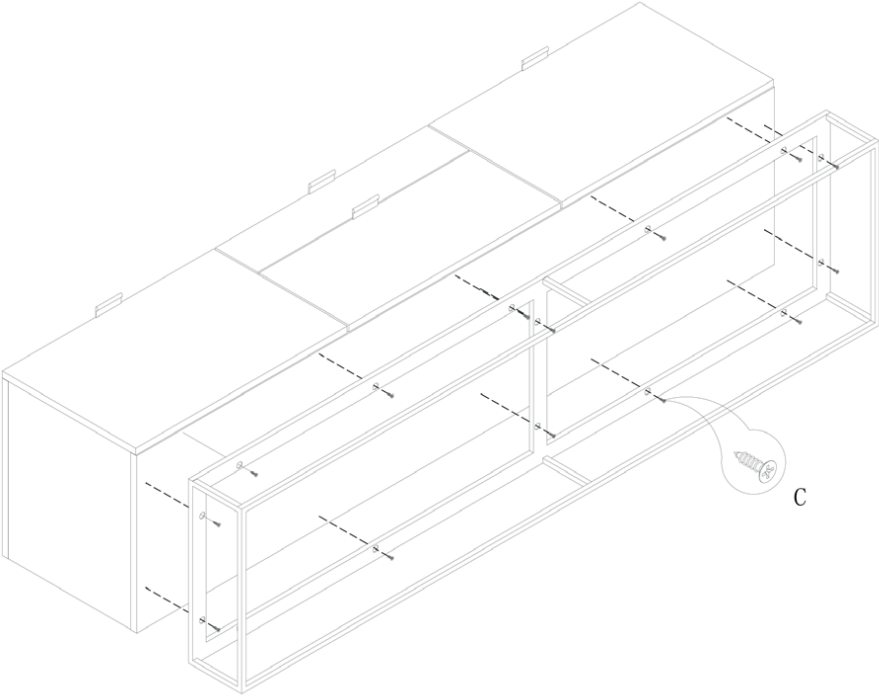


FIG.
3

