

ASSEMBLY INSTRUCTION
7160-GC1801-2398





 


 


A	B	C	D	E	F	H
	 8*15mm		 8*50mm	 8*25mm		
2 PCS	16PCS	4PCS	6PCS	4PCS	3PCS	2PCS
I	K					
						
4 PCS	1PC					

FIG.
1,2

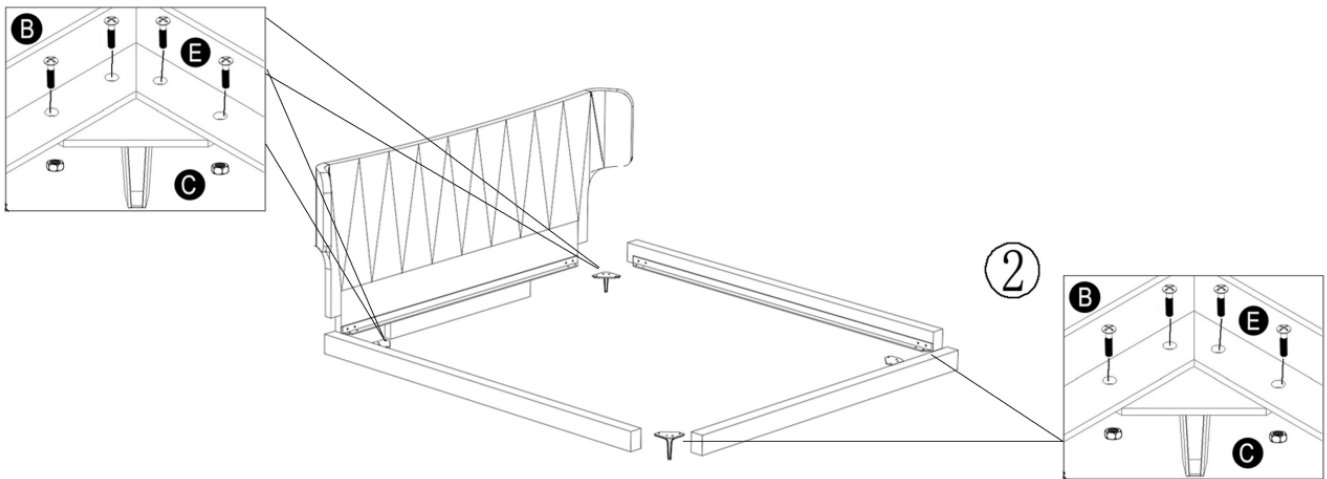
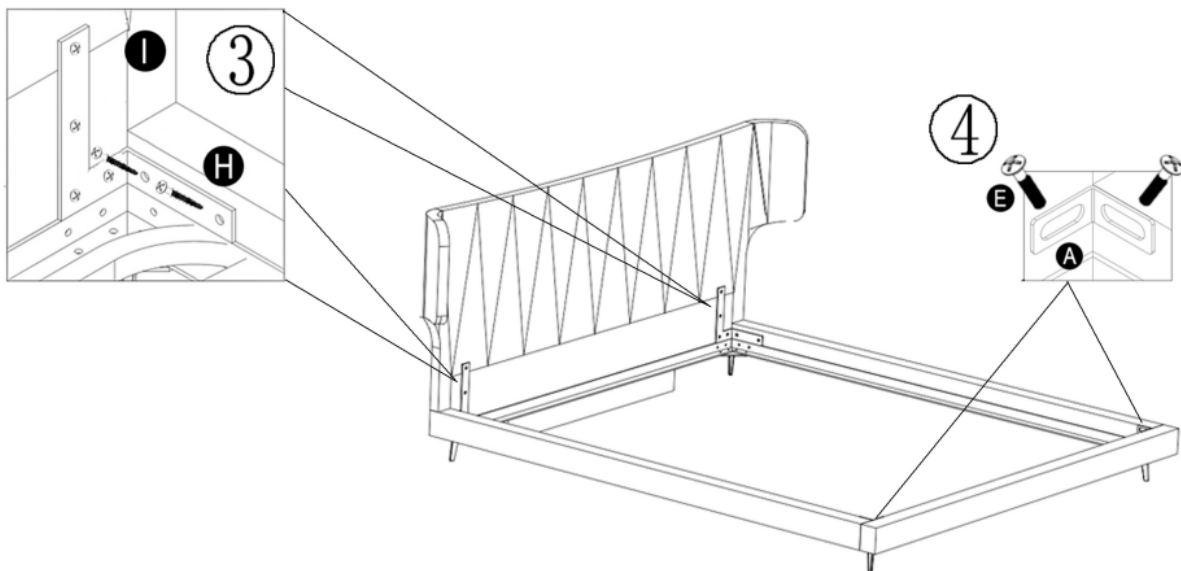


FIG.
3,4







 





A	B	C	D	E	F	H
	 8*15mm		 8*50mm	 8*25mm		
2 PCS	16PCS	4PCS	6 PCS	4 PCS	3PCS	2 PCS
I	K					
						
4 PCS	1PC					

FIG.
5

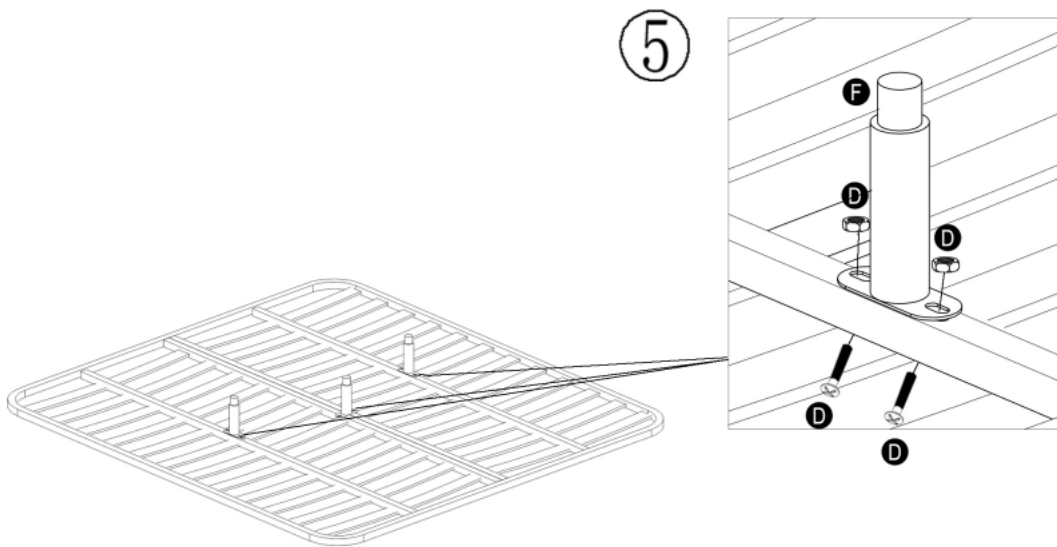


FIG.
6

