






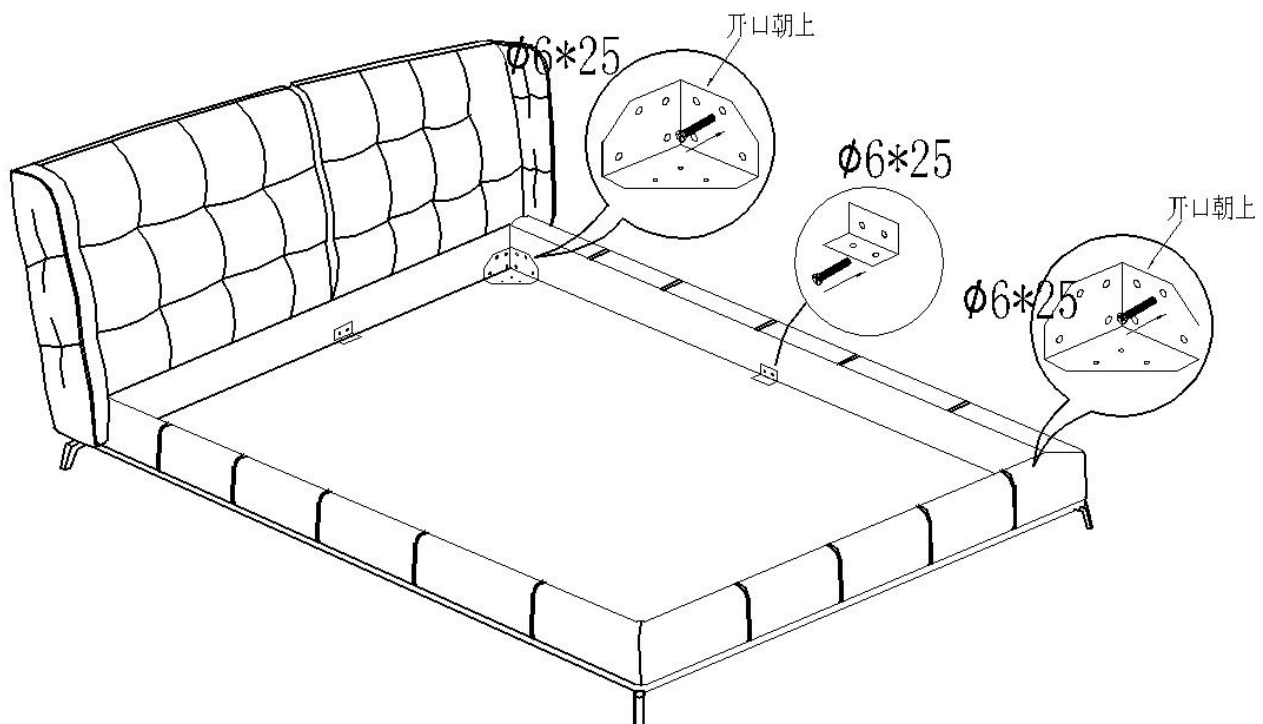


Code No	Name	Photos	size	QTY	spare parts
1	bed feet		16cm	4	
2	corner connector (open side up )			4	
3	4 holes connector		55*50	4	
4	slat feet		14cm (adjustable)	4	
5	gasket			52	4
6	flat head screw		φ6*25	52	4
7	big corner pad		177*177	4	
8	blind nut		M6	12	

**FIG.**  
**1**



1, prepare headboard, side board, footboard, and all the accessories like photo.  
install like photo.

FIG.  
2

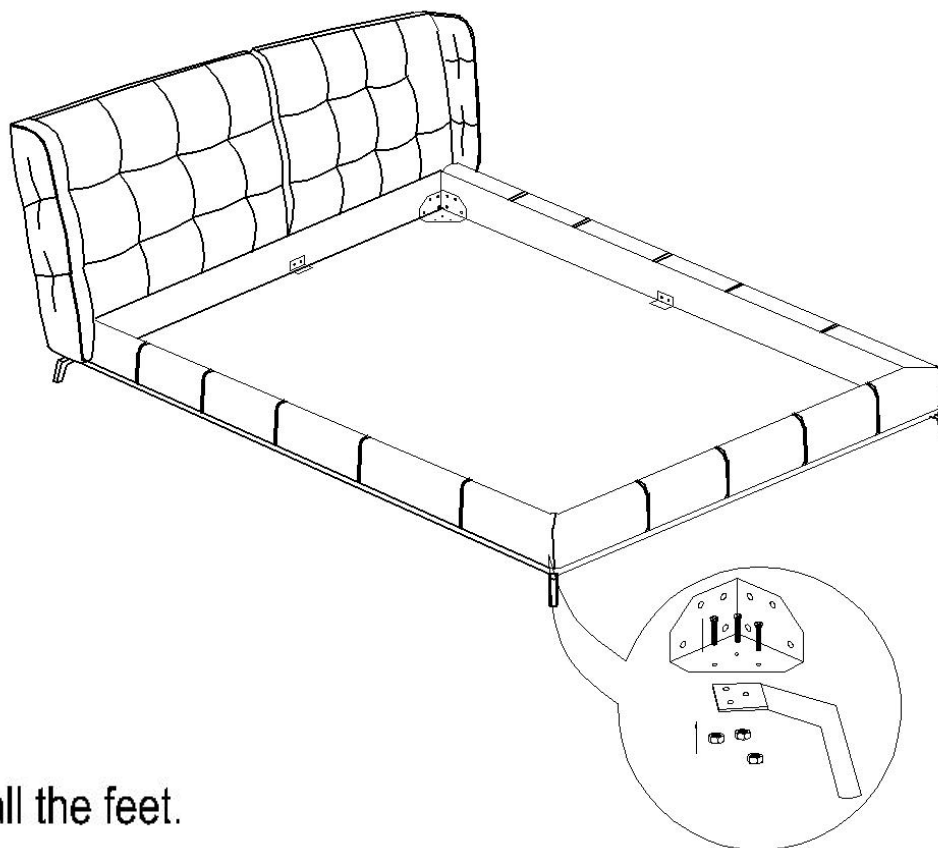


FIG.  
3

