


A	B	C	D	E	F	G	H
			 M8	 M8*20	 M8*40	 M8*60	 M6*20
1 PC	1 PC	8 PCS	4 SET	2 PCS	2 PCS	2 PCS	8 PCS






FIG.
1

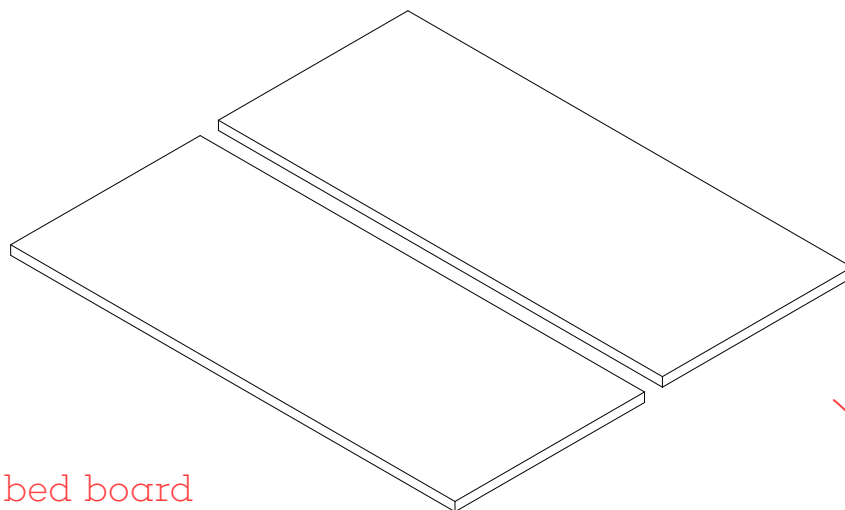

Take out the bed board
and lock the 2 metal frames
of the bed board with D

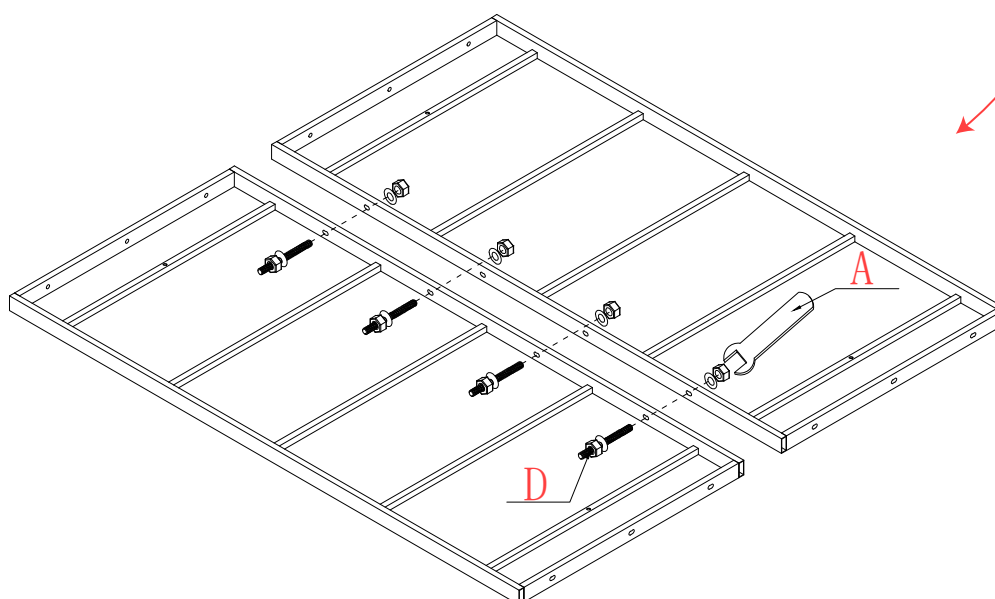

A	B	C	D	E	F	G	H
			 M8	 M8*20	 M8*40	 M8*60	 M6*20
1 PC	1 PC	8 PCS	4 SET	2 PCS	2 PCS	2 PCS	8 PCS




FIG.
2


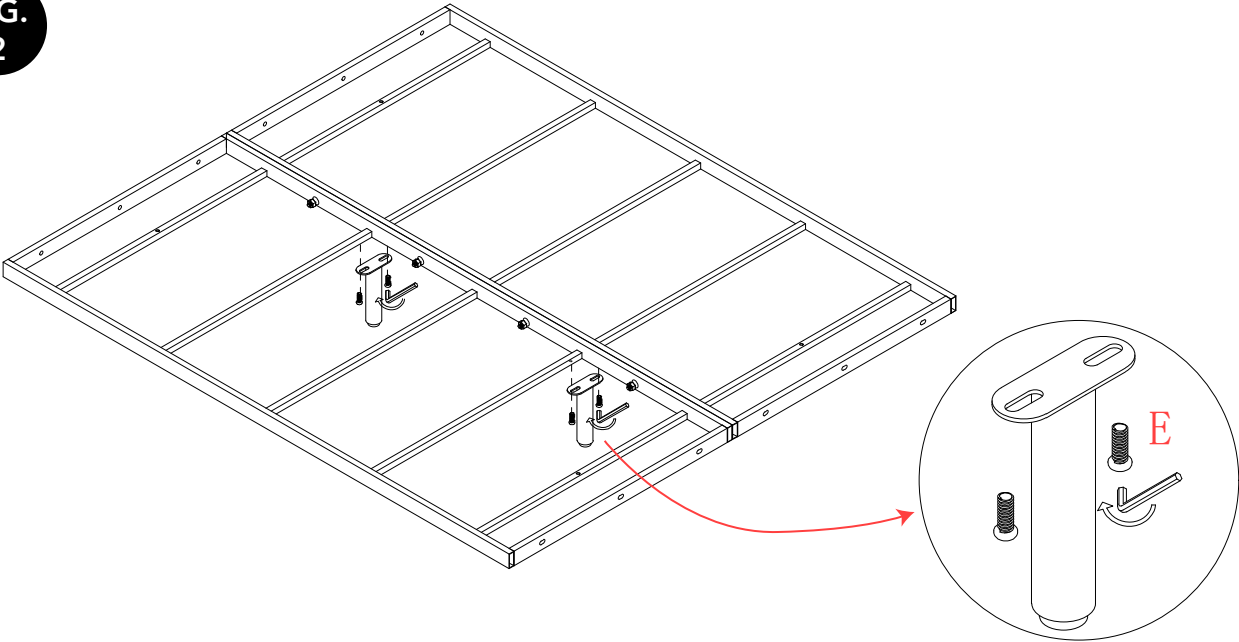


FIG.
3

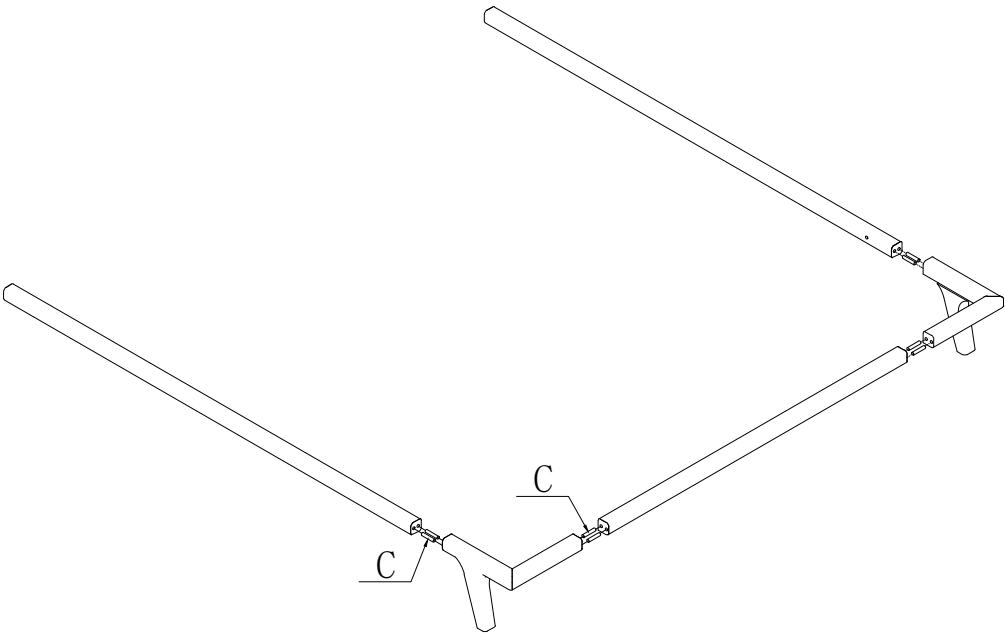

A	B	C	D	E	F	G	H
			 M8	 M8*20	 M8*40	 M8*60	 M6*20
1 PC	1 PC	8 PCS	4 SET	2 PCS	2 PCS	2 PCS	8 PCS




FIG.
4






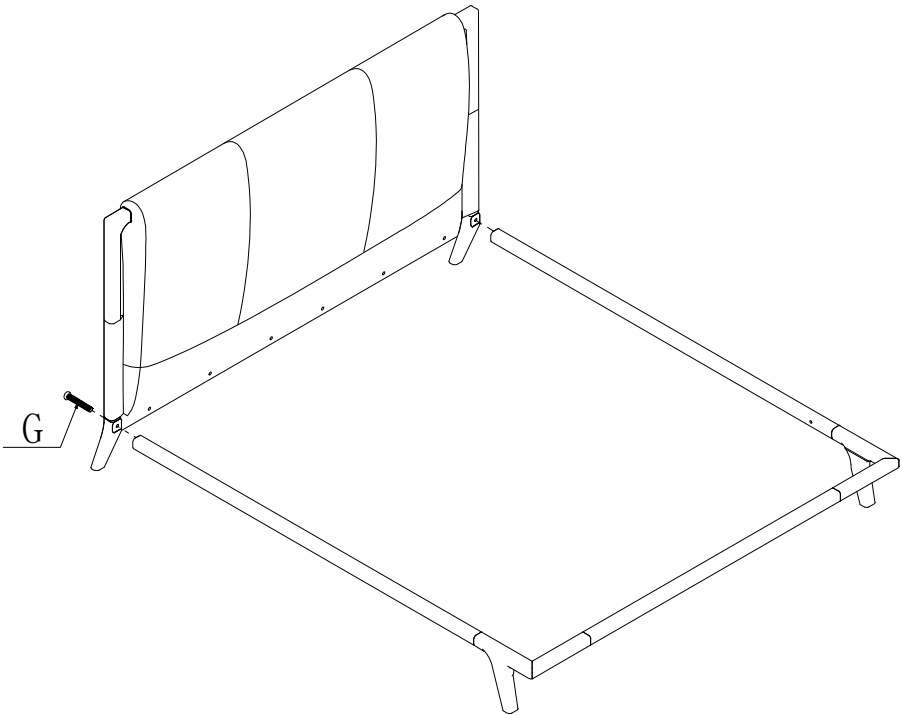


FIG.
5

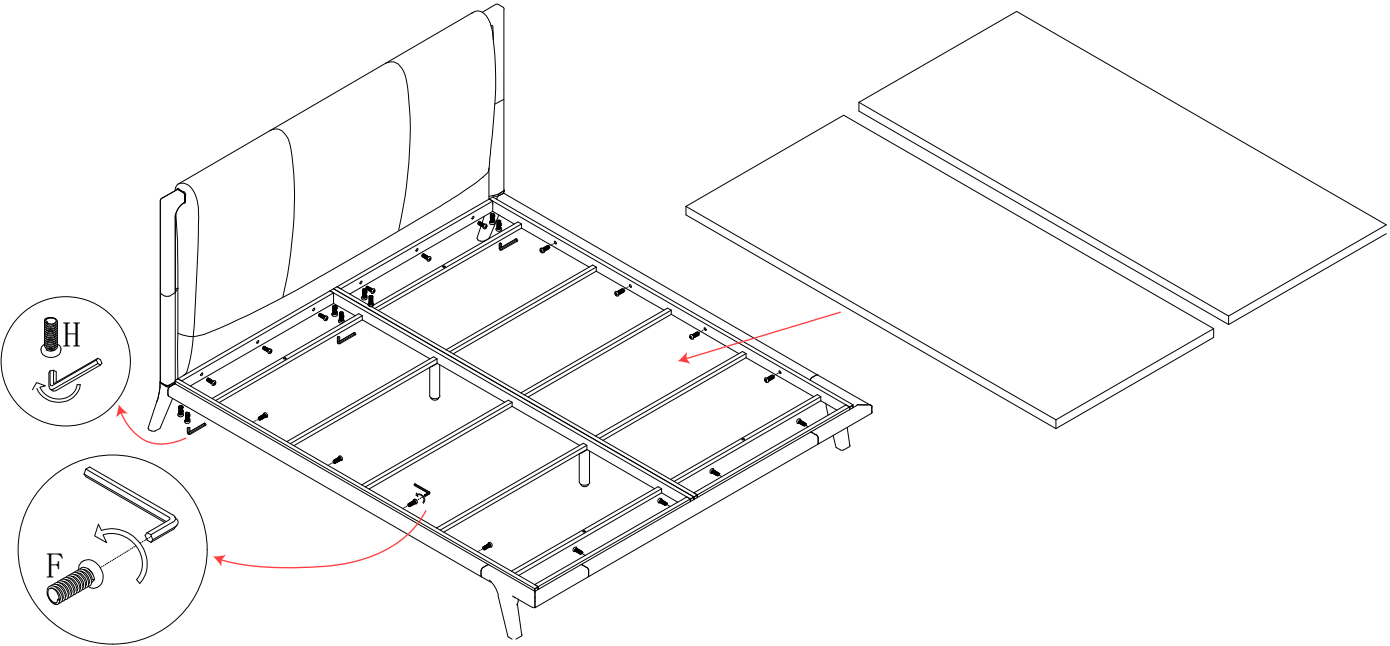

A	B	C	D	E	F	G	H
			 M8	 M8*20	 M8*40	 M8*60	 M6*20
1 PC	1 PC	8 PCS	4 SET	2 PCS	2 PCS	2 PCS	8 PCS




FIG.
6

